

Essentials of Laboratory Weathering

Sean Fowler

Andy Francis

Bill Tobin

Dave Duecker

Q-Lab

[View Recorded Presentation](#)

Q-Lab's Weathering Fundamentals Series

Today is the first of a two-part webinar series on key topics in weathering and corrosion testing

All upcoming and archived webinars can be accessed at:
q-lab.com/webinars

| Date | Topic |
|--------|------------------------------|
| 19 Feb | Essentials of Lab Weathering |
| 26 Feb | Natural Outdoor Weathering |

Administrative Notes

You'll receive a follow-up email from info@email.q-lab.com with links to a survey, registration for future webinars, and to download the slides

Use the **Q&A feature in Zoom** to ask us questions today!



We make testing simple.



Thank you for attending our webinar!

We hope you found our *Essentials of Laboratory Weathering* webinar to be helpful and insightful. The link below will give you access to the slides and recorded webinar.

What We Will Talk About

- Basics of Weathering
- Why Perform Laboratory Weathering?
- Laboratory Weathering Testing
 - Xenon
 - Fluorescent UV
- Elements of an Effective Testing Program

What We Will Talk About

- Basics of Weathering
- Why Perform Laboratory Weathering?
- Laboratory Weathering Testing
 - Xenon
 - Fluorescent UV
- Elements of an Effective Testing Program

Weathering:

Changes in material properties resulting from exposure to the radiant energy present in sunlight in combination with heat (including temperature cycling) and water in its various states, predominately as humidity, dew, and rain.



Sunlight



Heat




Water

Sunlight

- A form of energy
- Electromagnetic radiation
- Usually described in terms of **irradiance & wavelength (λ)**



Electromagnetic Spectrum

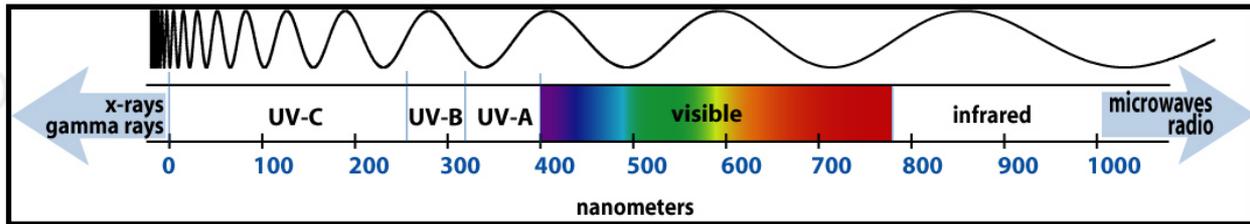


Sunlight

UV causes virtually all polymer degradation!

| | | |
|---------|-------------|------|
| UV | 295-400 nm | ~7% |
| Visible | 400-800 nm | ~55% |
| IR | 800-3000 nm | ~38% |



Irradiance

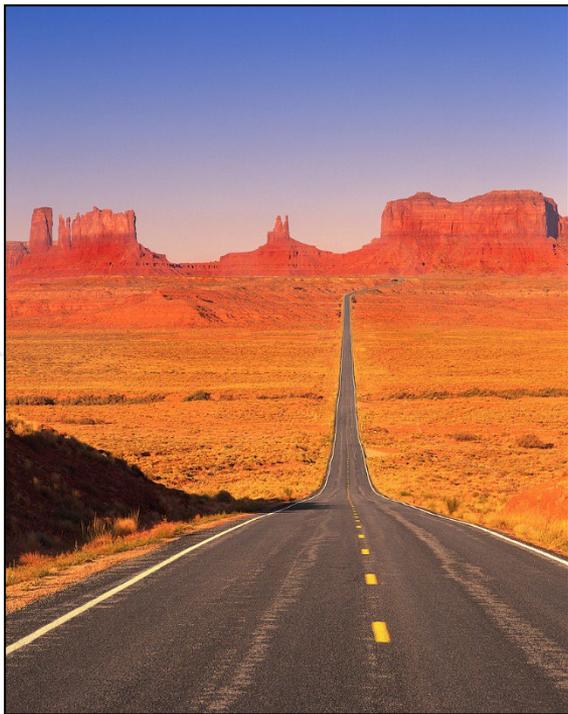

Irradiance¹ is the rate at which light energy falls on a surface, per unit area
[W/m²] or [J/s·m²]

Spectral irradiance² is the irradiance of a surface per unit wavelength
[W/m²/nm]


Radiant exposure¹ (or radiant dosage) is irradiance over a period of time
[J/m²] or [W·s/m²]

1 ASTM G113 – Terminology

2 ISO 9288 – Physical quantities and Definitions

Spectral Irradiance

Also called Spectral Power Distribution, or SPD

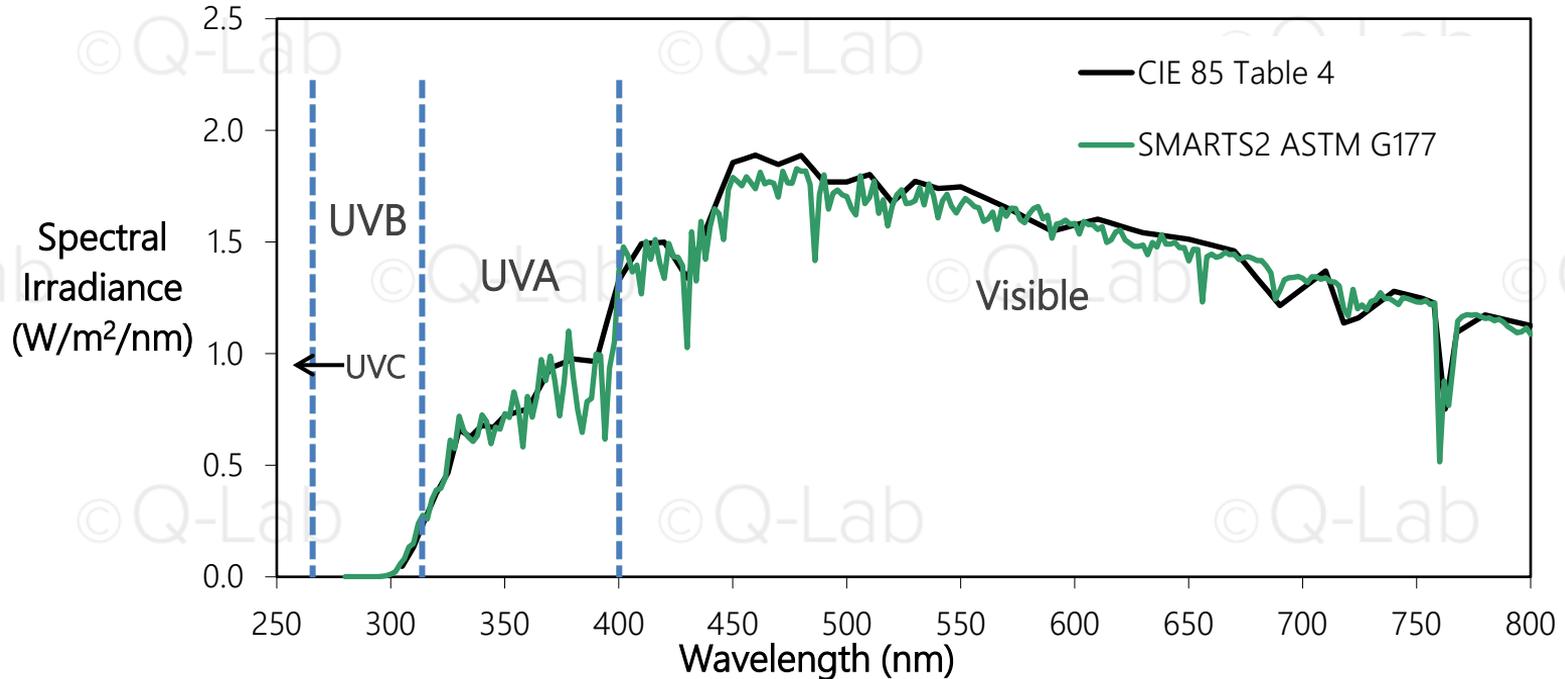


The absolute or relative radiant power emitted by a source, or incident upon a receiver as a function of wavelength. (ASTM G113)

Spectrum Modifiers




- Sun angle
 - Time of Year (e.g. summer)
 - Time of Day (e.g. noon)
 - Latitude
- Altitude

Sunlight Through Window Glass

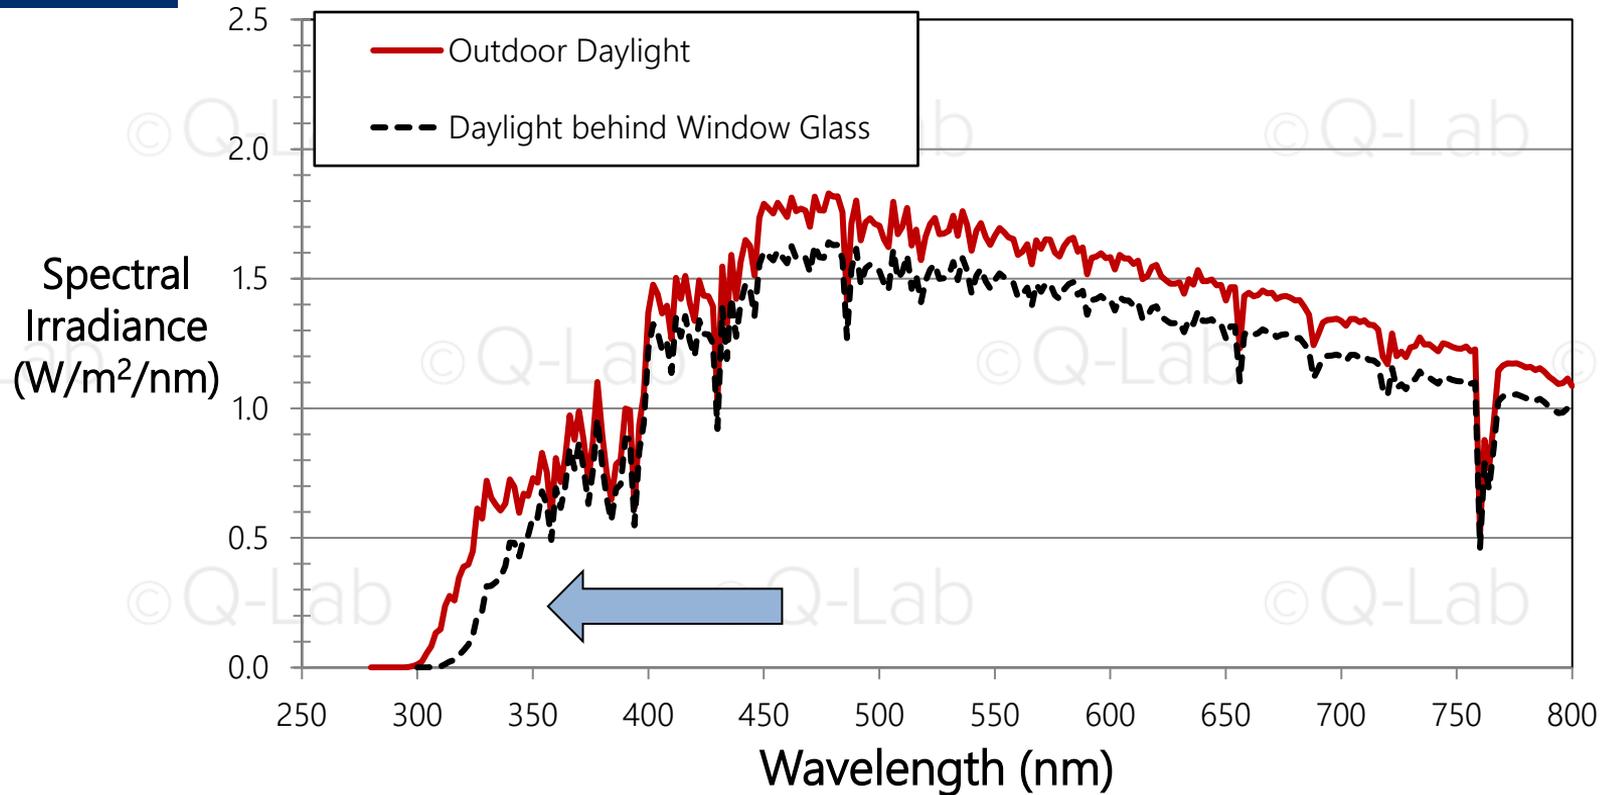

Sunlight Through Automobile Glass

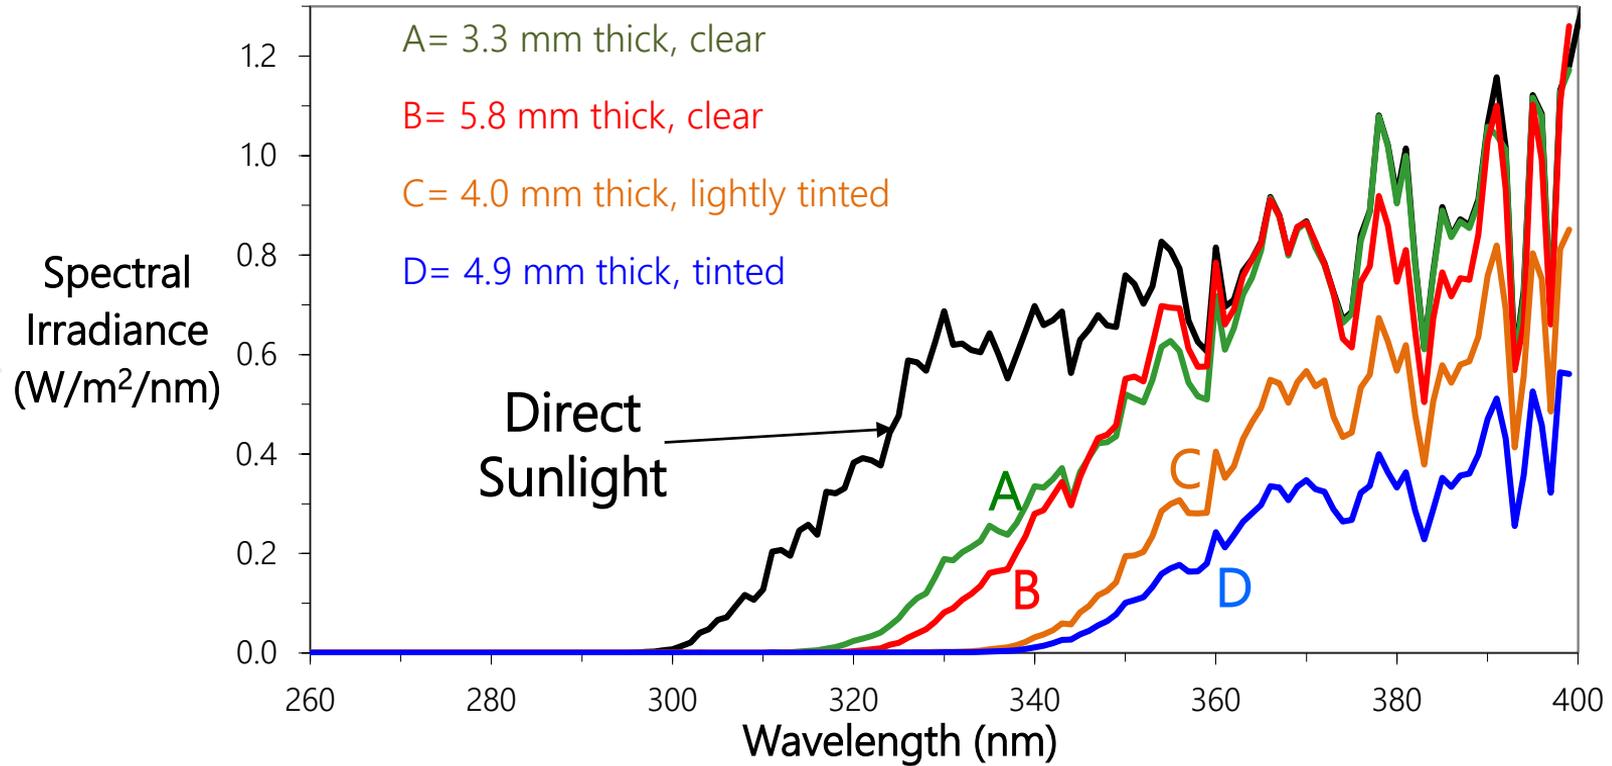

Heat Effects

- Elevated specimen temperature
- Dimensional change
- Evaporation
- Thermal aging
- Thermal cycling




Photochemical Reactions and Heat



- Photochemical reactions are **not** usually simple one-step reactions
- **Primary** photochemical reactions *are not* affected by heat
- **Secondary** photochemical reactions *are* affected by heat

Effect of Temperature: Oxidation Rate of Polyethylene


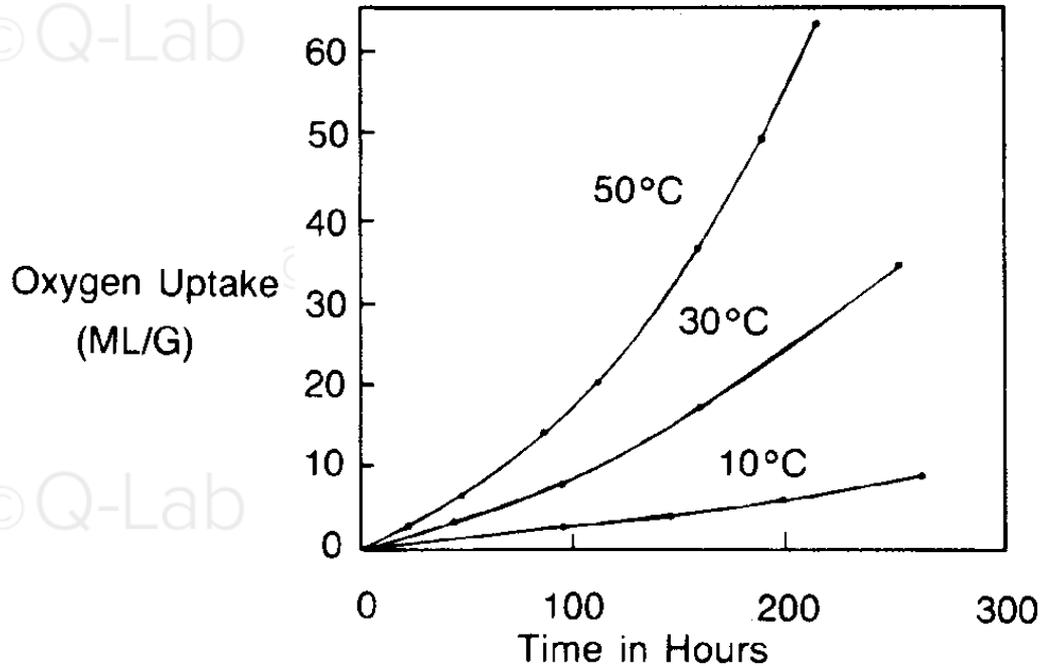


**Time In Hours Exposed to UV lamps*

Temperature and Color

Darker Colors Have Higher Temperatures!

Temperature Δ
($^{\circ}\text{C}$)

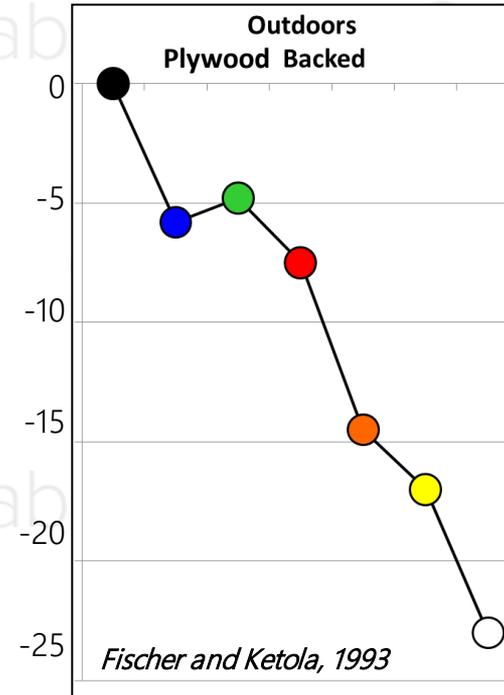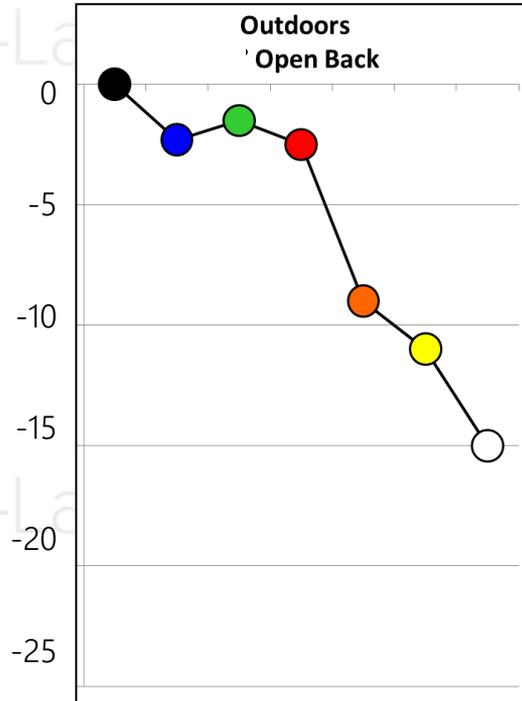

Heat behind Window Glass




Temperature of automobile interior components behind window glass can exceed 100 °C

Water

- Chemical Reactions
 - Reactions in solution
 - Facilitates reaction via increase in oxygen transport
- Physical Effects
 - Erosion
 - Absorption/freeze-thaw
 - Thermal shock
 - Impact (material loss)



Forms of Water

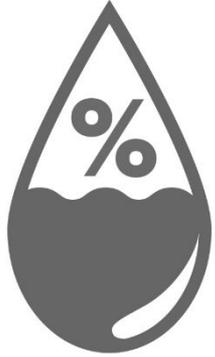

Relative Humidity
Time of Wetness



Rain
Thermal Shock and Erosion



Dew
Most Outdoor Wetness

Materials outdoors are wet longer than you think 12+ hours/day

Dew, not Rain, Is the Source of Most Outdoor Wetness!



Don't Underestimate the Effect of Moisture!

- Changes the **rate** of degradation
- Changes **mode** of degradation
- Difficult to accelerate

Summary: Forces of Weathering

- Sunlight
 - UV is most damaging for most durable materials
 - Material-specific “Spectral Sensitivity” affects degradation
- Temperature
 - Includes both heat and thermal cycling
 - Influences secondary reactions
- Water
 - Dew is responsible for most wetness
 - Rainfall and humidity also contribute to weathering

Weathering includes synergistic effects between these factors!

What We Will Talk About

- Basics of Weathering
- **Why Perform Laboratory Weathering?**
- Laboratory Weathering Testing
 - Xenon
 - Fluorescent UV
- Elements of an Effective Testing Program

Why Test?

- Meet specifications
- Avoid catastrophes
- Enhance your reputation
- Verify supplier claims
- Improve product durability
- Save on material costs
- Expand existing product lines
- Enter new markets
- Outrun the competition
- Stay ahead of regulations

Laboratory Testing is a Tool for Directional Decision-Making

Laboratory Accelerated tests can help you:

- Make decisions better and/or faster.
- Reduce risk of making bad decisions
- Reduce risk of making decisions too slowly

What Kind of Test Should I Run?

| Accelerated Test Type | Result | Test Time | Results compared to |
|-----------------------|-------------|---|------------------------|
| Quality Control | Pass / fail | <ul style="list-style-type: none">• Defined• Short | Material specification |

What Kind of Test Should I Run?

| Accelerated Test Type | Result | Test Time | Results compared to |
|----------------------------|-------------|---|-------------------------------------|
| Quality Control | Pass / fail | <ul style="list-style-type: none">• Defined• Short | Material specification |
| Qualification / validation | Pass / fail | <ul style="list-style-type: none">• Defined• Medium-long | Reference material or specification |

What Kind of Test Should I Run?

| Accelerated Test Type | Result | Test Time | Results compared to |
|----------------------------|-------------------|---|-------------------------------------|
| Quality Control | Pass / fail | <ul style="list-style-type: none">• Defined• Short | Material specification |
| Qualification / validation | Pass / fail | <ul style="list-style-type: none">• Defined• Medium-long | Reference material or specification |
| Correlative | Rank-ordered data | <ul style="list-style-type: none">• Open-ended• Medium | Natural exposure (Benchmark site) |

What Kind of Test Should I Run?

| Accelerated Test Type | Result | Test Time | Results compared to |
|----------------------------|-------------------------------------|---|--|
| Quality Control | Pass / fail | <ul style="list-style-type: none">• Defined• Short | Material specification |
| Qualification / validation | Pass / fail | <ul style="list-style-type: none">• Defined• Medium-long | Reference material or specification |
| Correlative | Rank-ordered data | <ul style="list-style-type: none">• Open-ended• Medium | Natural exposure (Benchmark site) |
| Predictive | Service life Acceleration factor | <ul style="list-style-type: none">• Open-ended• Long | Natural exposure (Service environment) |

Advantages of Accelerated Lab Testing


- Fast
 - Repeatable
 - In-house
-
- Great for Quality Control, Qualification, and Research & Development

What We Will Talk About


- Basics of Weathering
- Why Perform Laboratory Weathering?
- **Laboratory Weathering Testing**
 - Xenon
 - Fluorescent UV
- Elements of an Effective Testing Program

Xenon Arc Laboratory Weathering

Xenon Arc Test Chamber

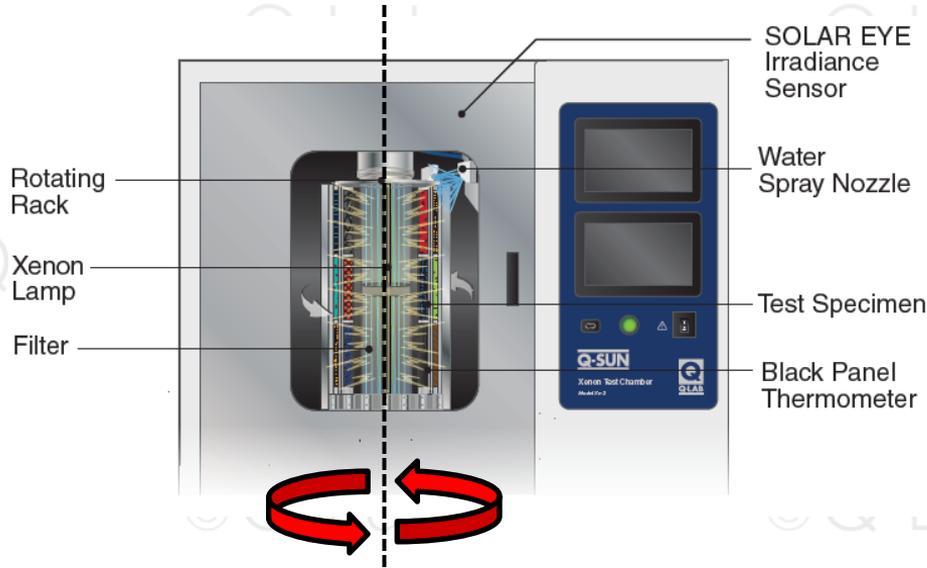

Rotating Rack

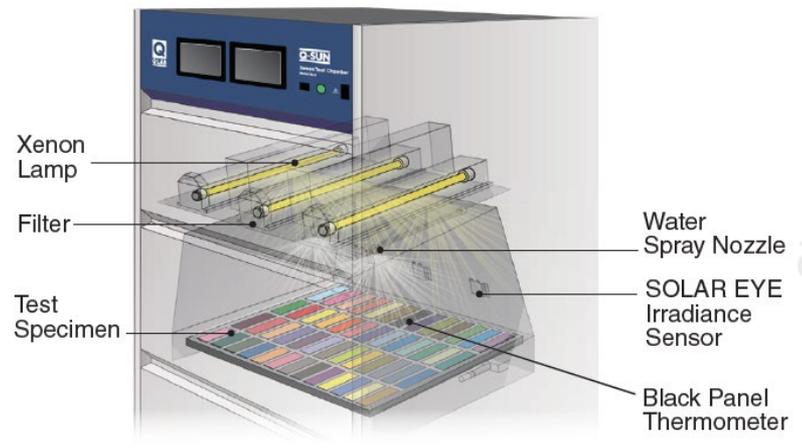

Flat Array

Xenon Arc Lamps

Air-cooled



Water-cooled



Water-cooled
Assembly



Xenon Arc Spectra


Major Influencing Factors

- Optical filters
- Irradiance level (intensity)
- Wavelength at which irradiance is controlled (“control point”)
- Lamp aging

Overview of Filters

- Daylight
- Window
- Extended UV

Rotating drum "lantern"

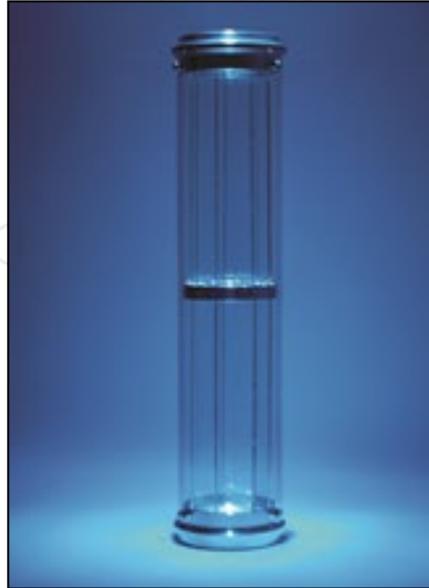


Flat array filter




**Other specialized filters used occasionally*


Daylight Filter Comparison

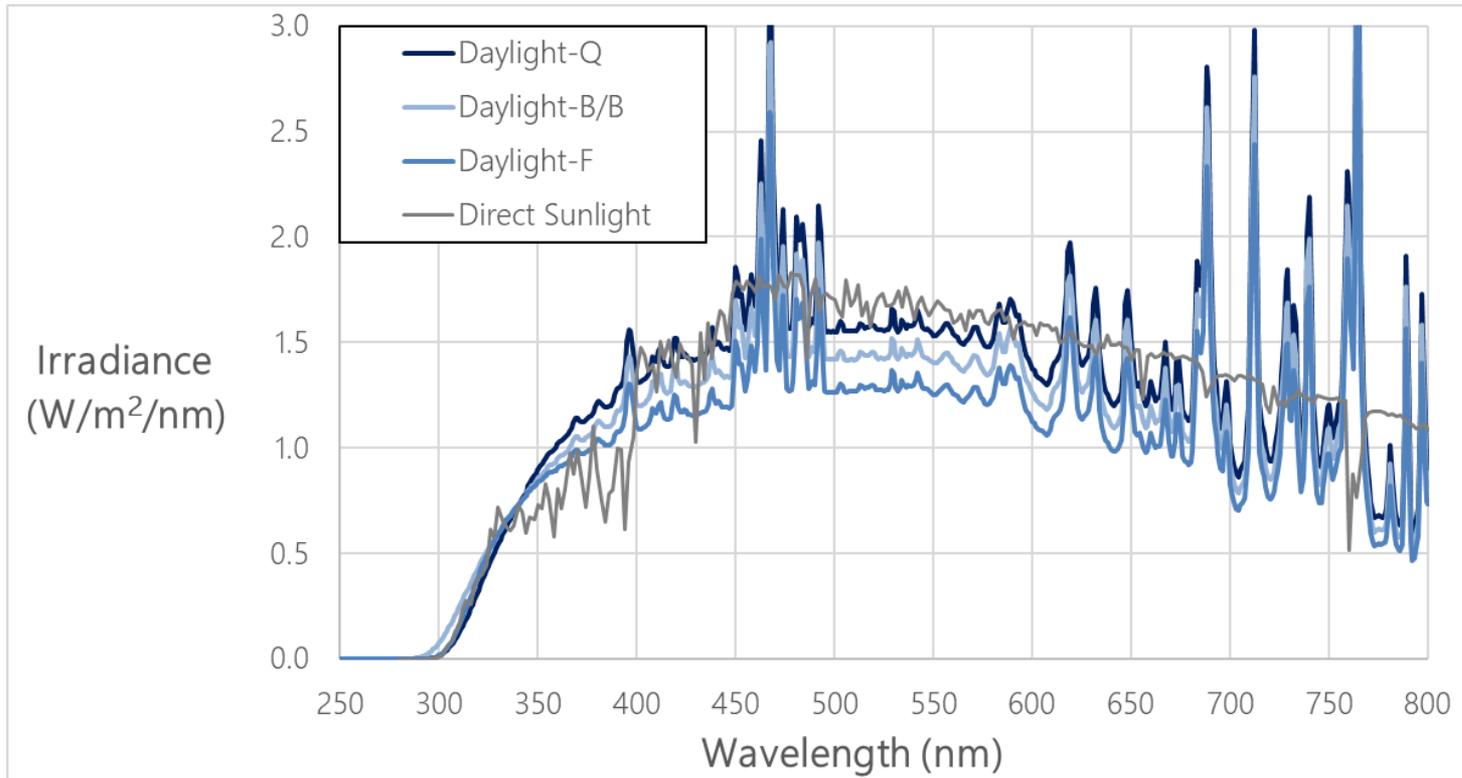


Window Filter Comparison

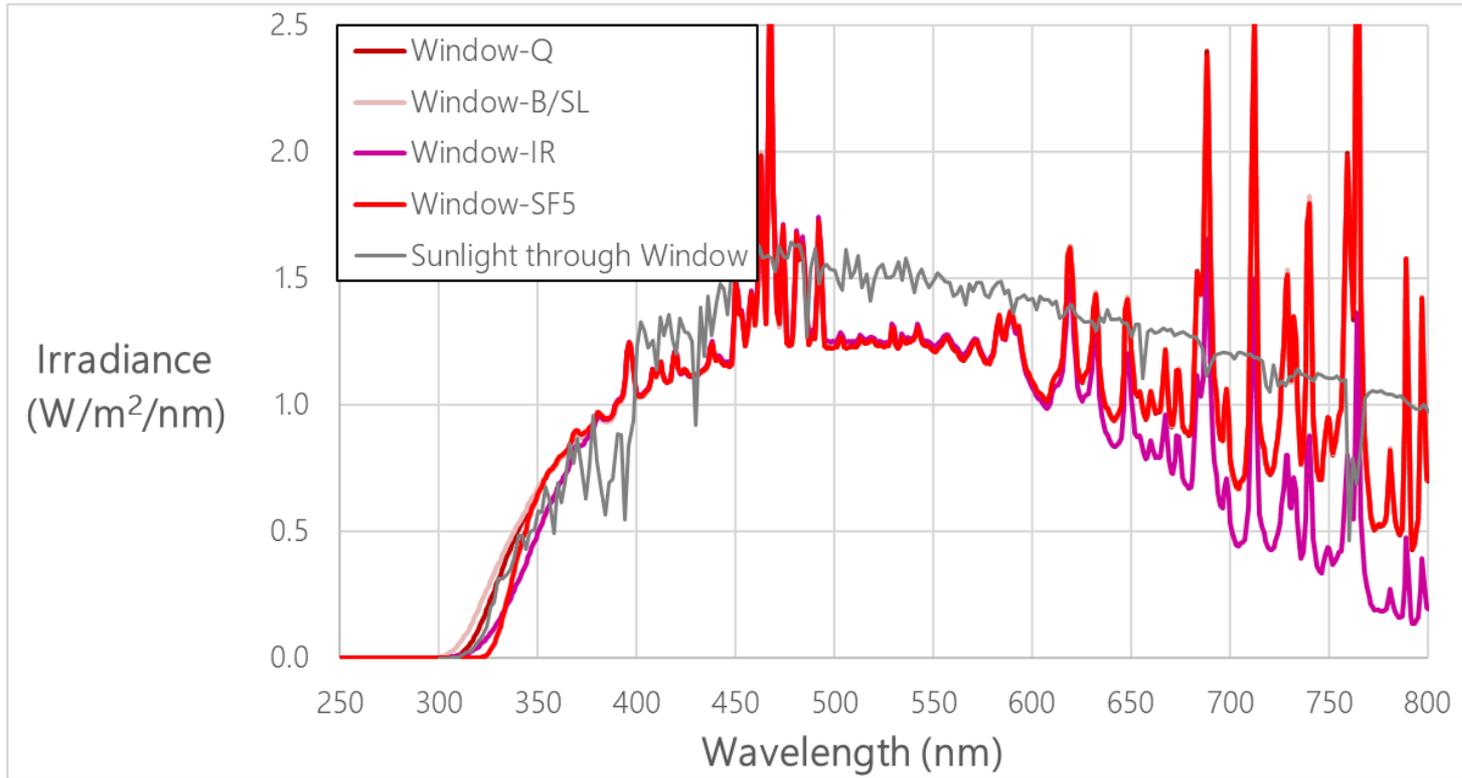

Extended UV Filter Comparison

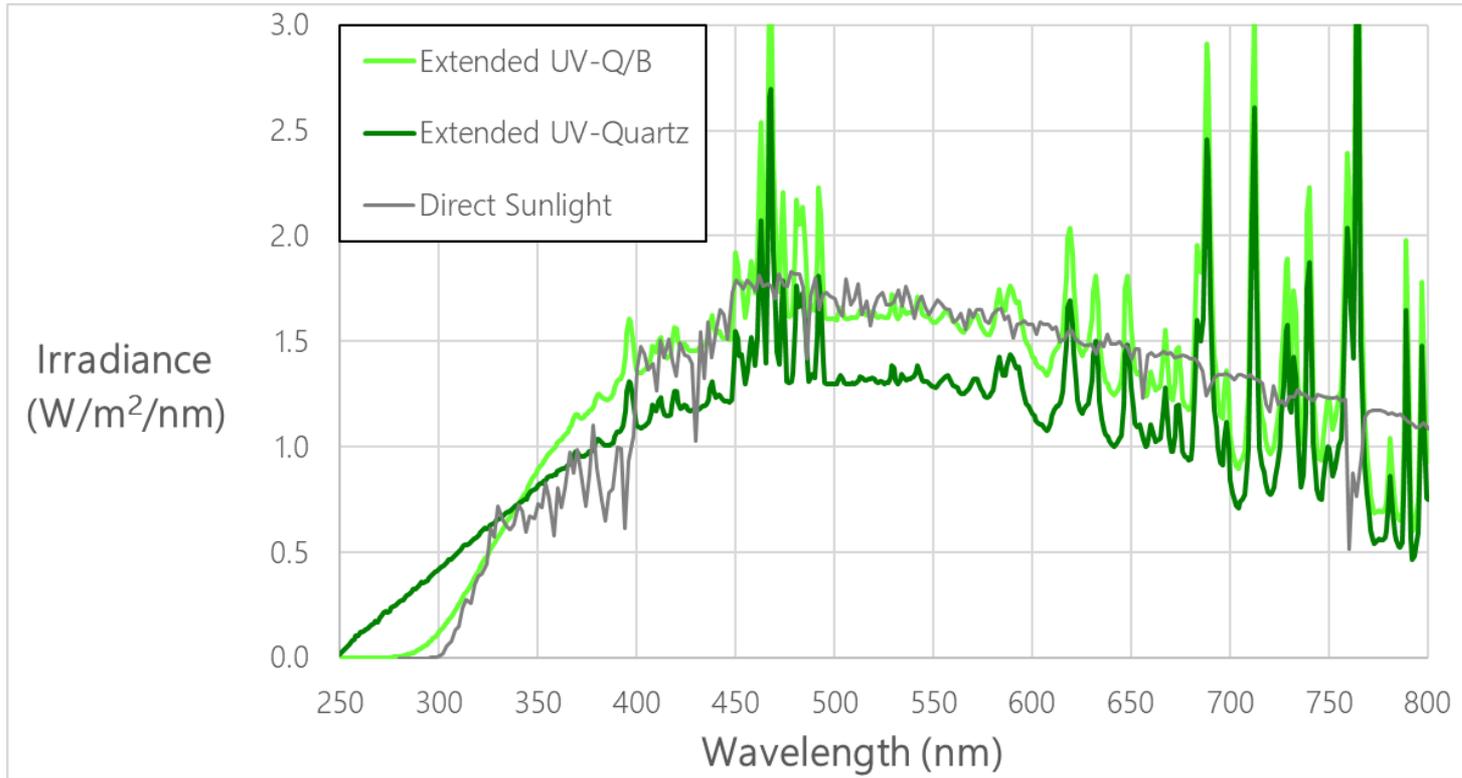

Optical Filters: UV Region

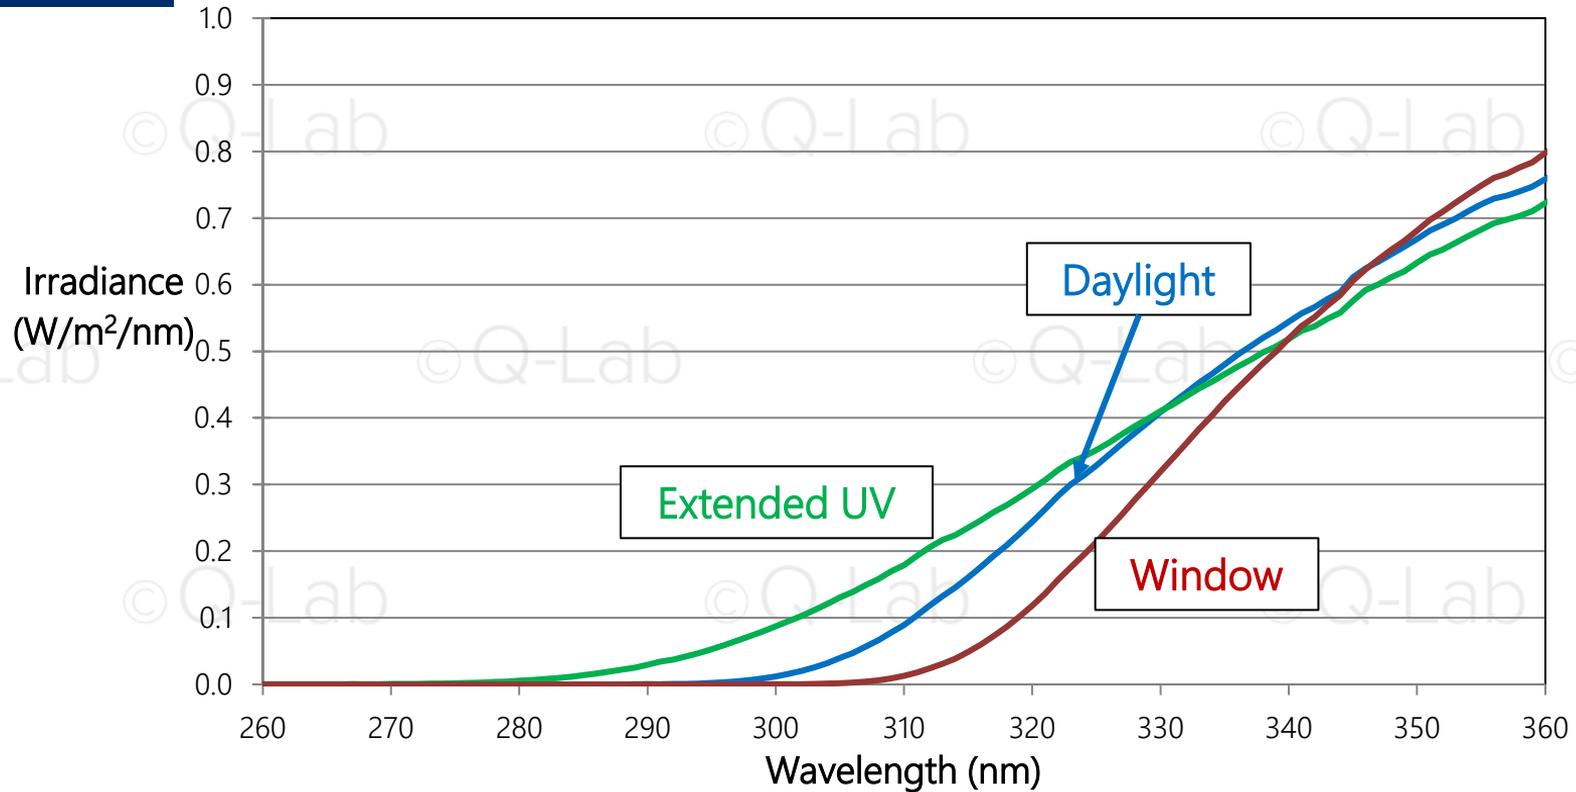

Optical Filter Aging


Water-Cooled vs Air-Cooled

- Filters for water-cooled lamp systems need to be replaced every 400-2000 hours
 - Contaminants, even in ultra-pure de-ionized water, reduce filter transmittance over time
- Almost all filters for air-cooled lamp systems do not age or need to be replaced

Q-SUN SOLAR EYE™

Irradiance Control

- Feedback Loop Control
 - Xenon-arc lamp
 - Light sensor
 - Control module
- Wavelength at which irradiance is controlled is referred to as Control Point

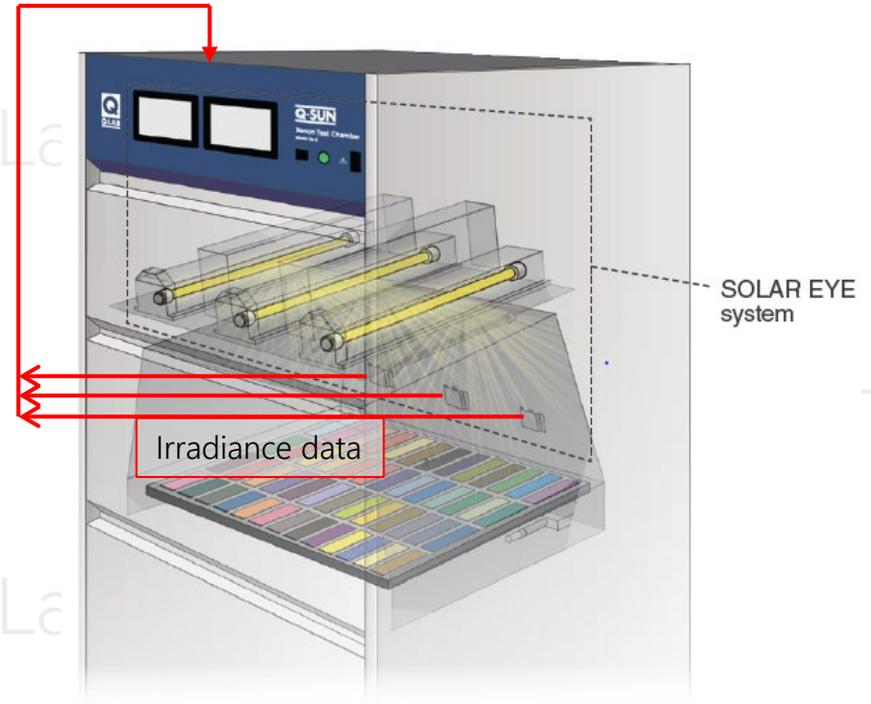

Irradiance Control Point Options

- Narrow Band
 - 340 nm
 - 420 nm
- Wide Band
 - Total UV TUV (300-400 nm)
 - Global (300-800 nm) – not recommended
 - Shorter wavelengths cause more photodegradation
 - Fails to account for xenon lamp aging


Why Is Choice of Control Point Important?

- Xenon Arc lamps age with use
- Spectral shift limits useful lamp life
- Controlling irradiance in **wavelength region of interest** maximizes repeatability and reproducibility

Black Panel Temperature Control

- Most common in test standards
- Approximates maximum specimen surface temperature
- Can be used in combination with chamber air temp sensor and control

Black Panel Temperature Sensors
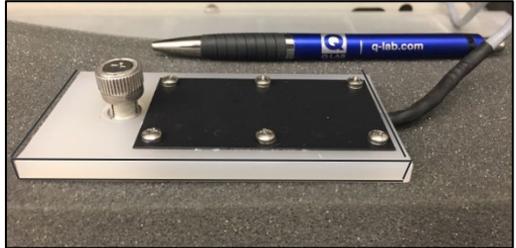
| Panel | Construction | ASTM Designation | ISO Designation |
|--|--|-------------------------|-----------------|
|  A photograph of an uninsulated black panel temperature sensor. It consists of a black rectangular panel with a black handle and a black cable. A blue pen with the Q-Lab logo is placed next to it for scale. A silver adjustment knob is visible on the left side of the panel. | Black painted stainless steel | Uninsulated Black Panel | Black Panel |
|  A photograph of an insulated black panel temperature sensor. It features a black panel mounted on a white PVDF base. A blue pen with the Q-Lab logo is placed next to it for scale. A silver adjustment knob is visible on the left side of the panel. | Black painted stainless steel mounted on 0.6 cm white PVDF | Insulated Black Panel | Black Standard |

* White Panel versions of the above are available but far less commonly used

**To maximize acceleration,
use maximum service temperature**

To minimize error, *DO NOT* exceed
maximum service temperature

Chamber Air Temperature Control

- Required by certain test methods
- Necessary for control of relative humidity (RH)
- Sensor must be shielded from light
- BP temp always hotter than chamber air temp from absorbing radiant heat

Relative Humidity Control

- Required by many test methods
 - Textiles
 - Automotive
- Many xenon testers can generate and control relative humidity
 - Boiler system
 - Nebulizer system
 - Air atomizing nozzle
- For many durable materials, RH makes very little difference compared to spray and condensation

Xenon Arc Water Spray

Front spray

- Primary method of water delivery
- Calibration technique for front spray recently developed (ASTM D7869)

Back spray


- Result of a failed experiment intended to generate condensation; persists in some standards

Dual spray

- For delivering a 2nd solution, e.g. acid rain, soap

Immersion (Ponding)

- Alternative to front spray called out in some standards

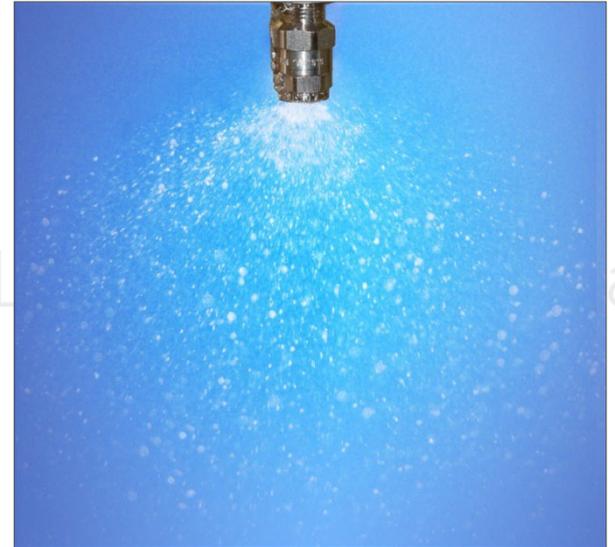

Xenon Arc Summary

- Best simulation of full-spectrum sunlight
- Lamps experience aging (fulcrum effect)
- Temperature effects
- Water spray and RH control
- Additional cost, maintenance, and complexity compared to fluorescent UV testers

Q-SUN Xenon Arc Testers

Xe-3



Xe-1



Xe-2




Xe-8



Fluorescent UV Laboratory Weathering

Fluorescent UV Schematic

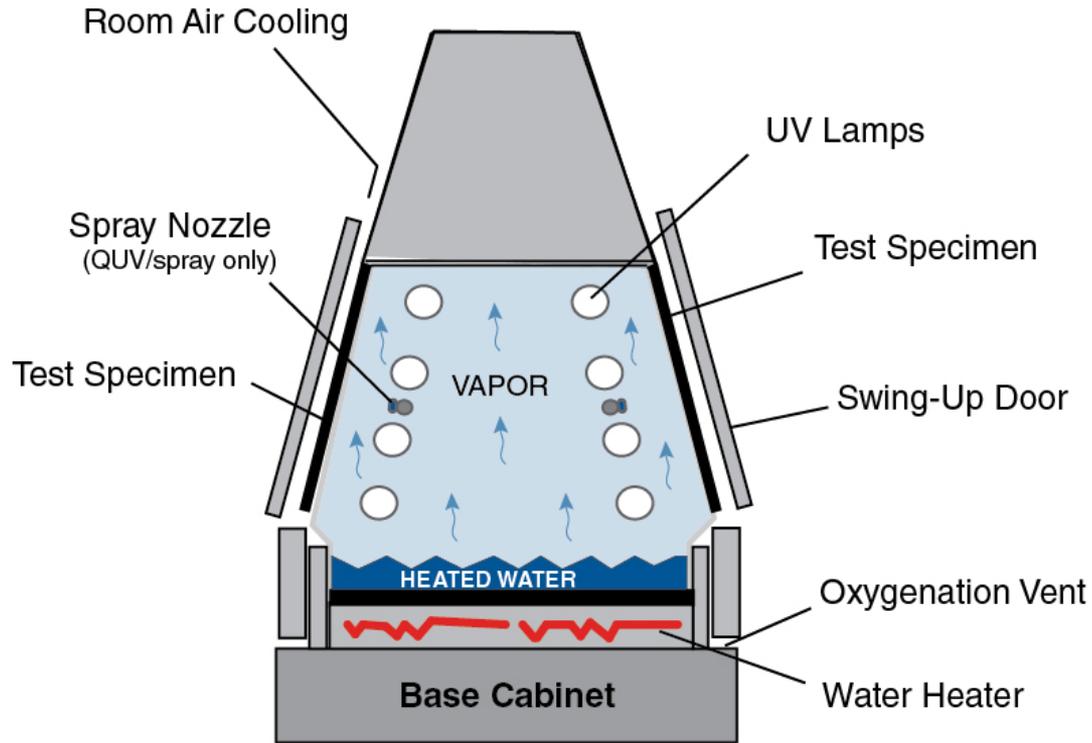


Fluorescent UV Lamps


- UVA-340 (Daylight UV)
- UVA-351 (Window UV)
- UVB-313EL (Extended UV)
- UVC-254 (UVGI)
- TUV-421
- Cool White (Indoor, office)




UVA-340 Lamps

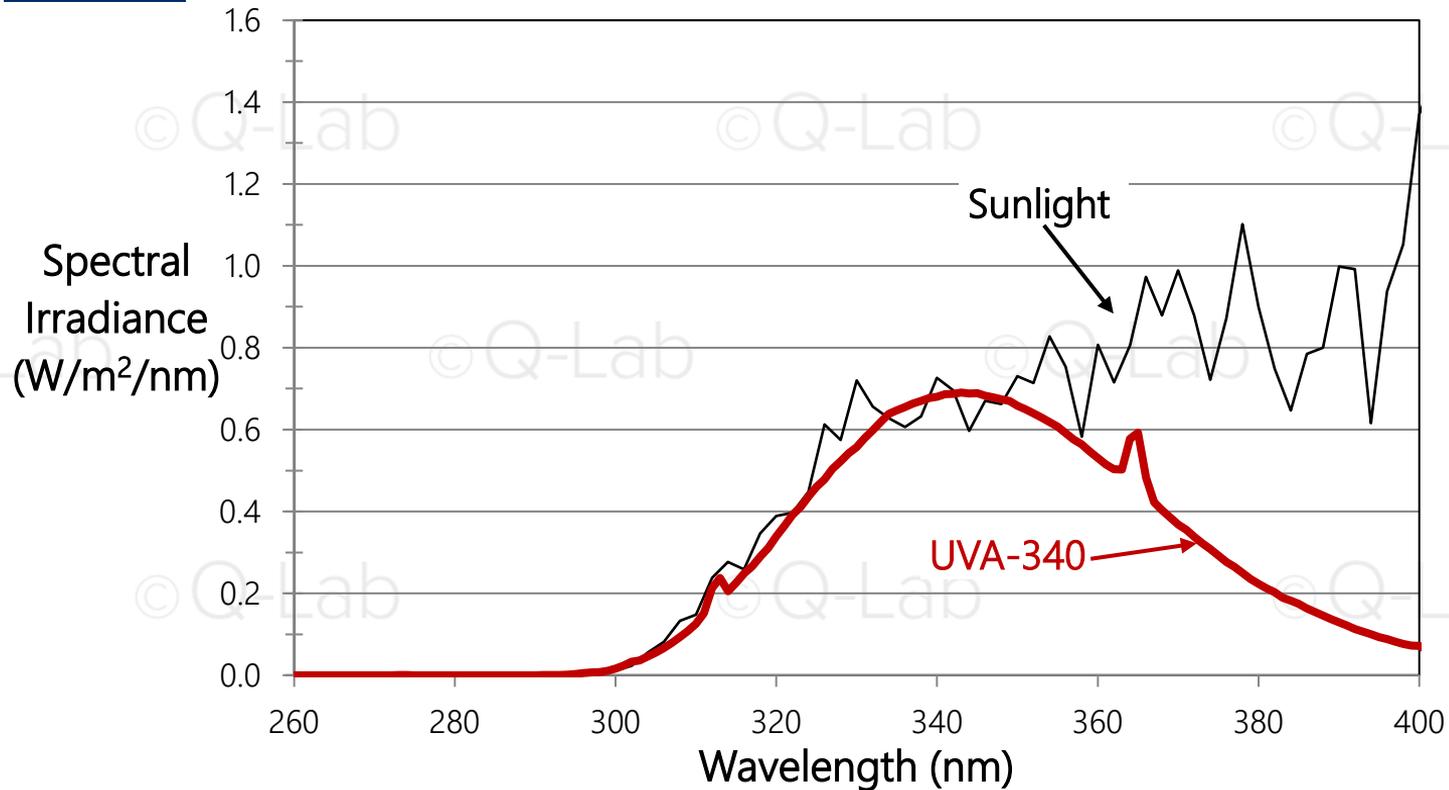


UVA-351 Lamps

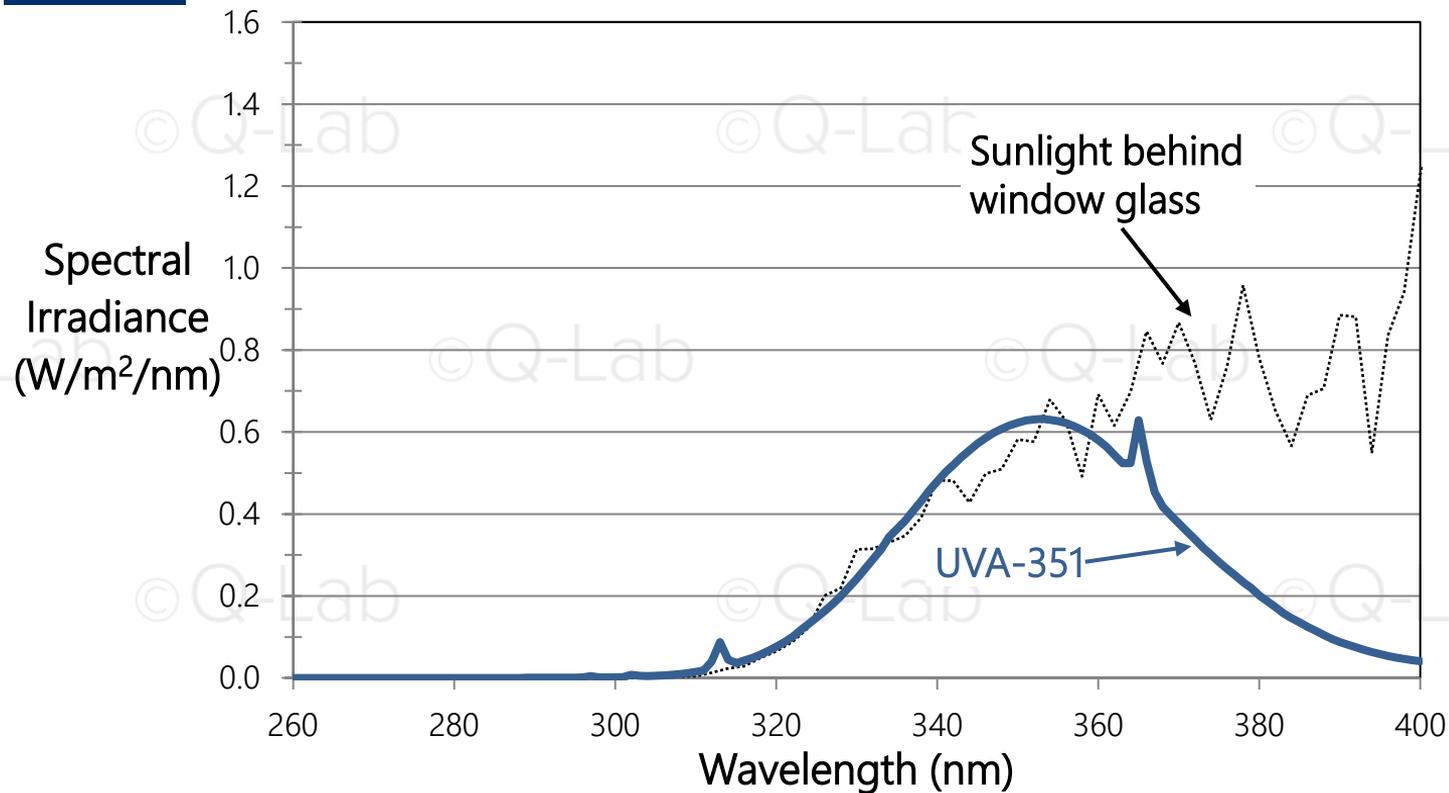


UVB Lamps

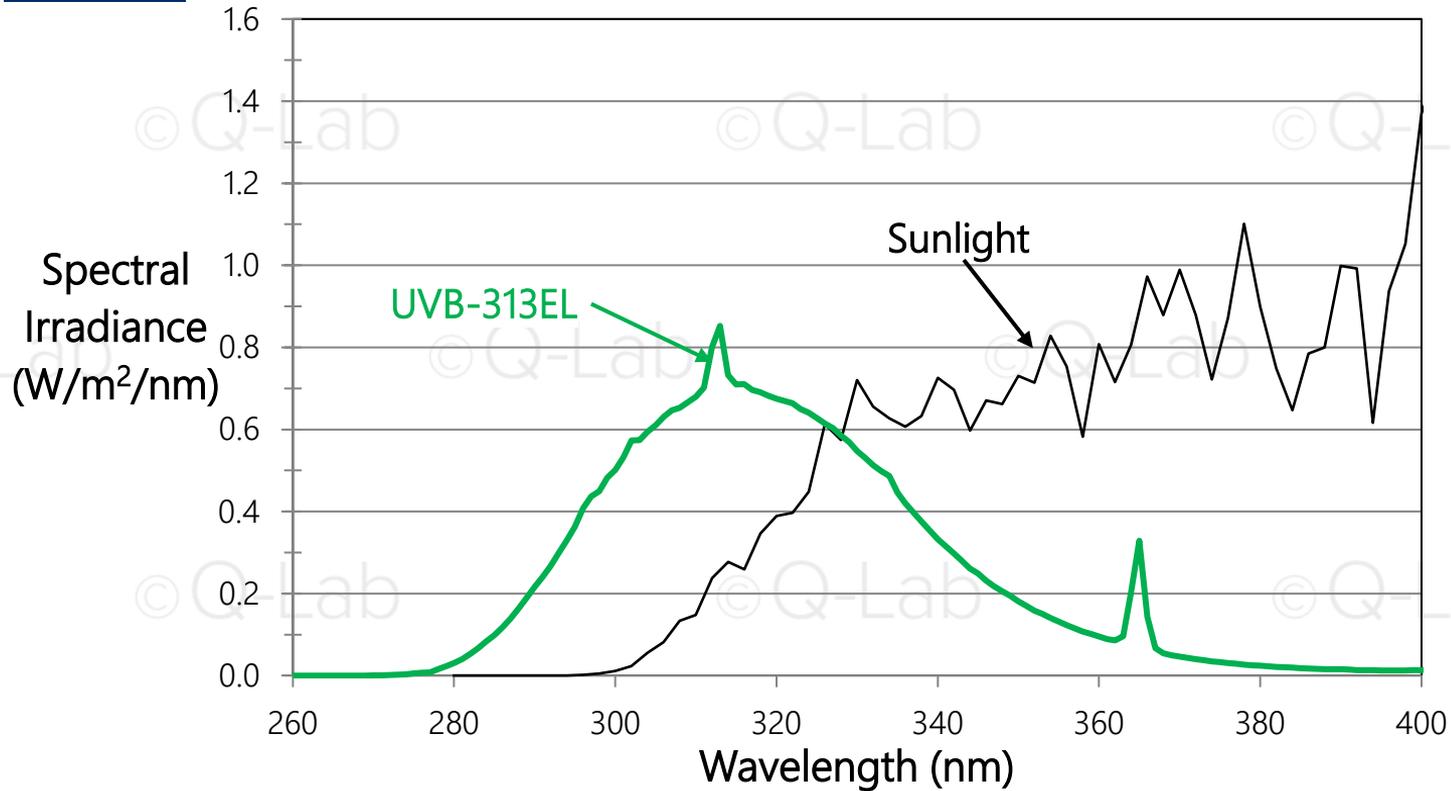


UVC Lamps

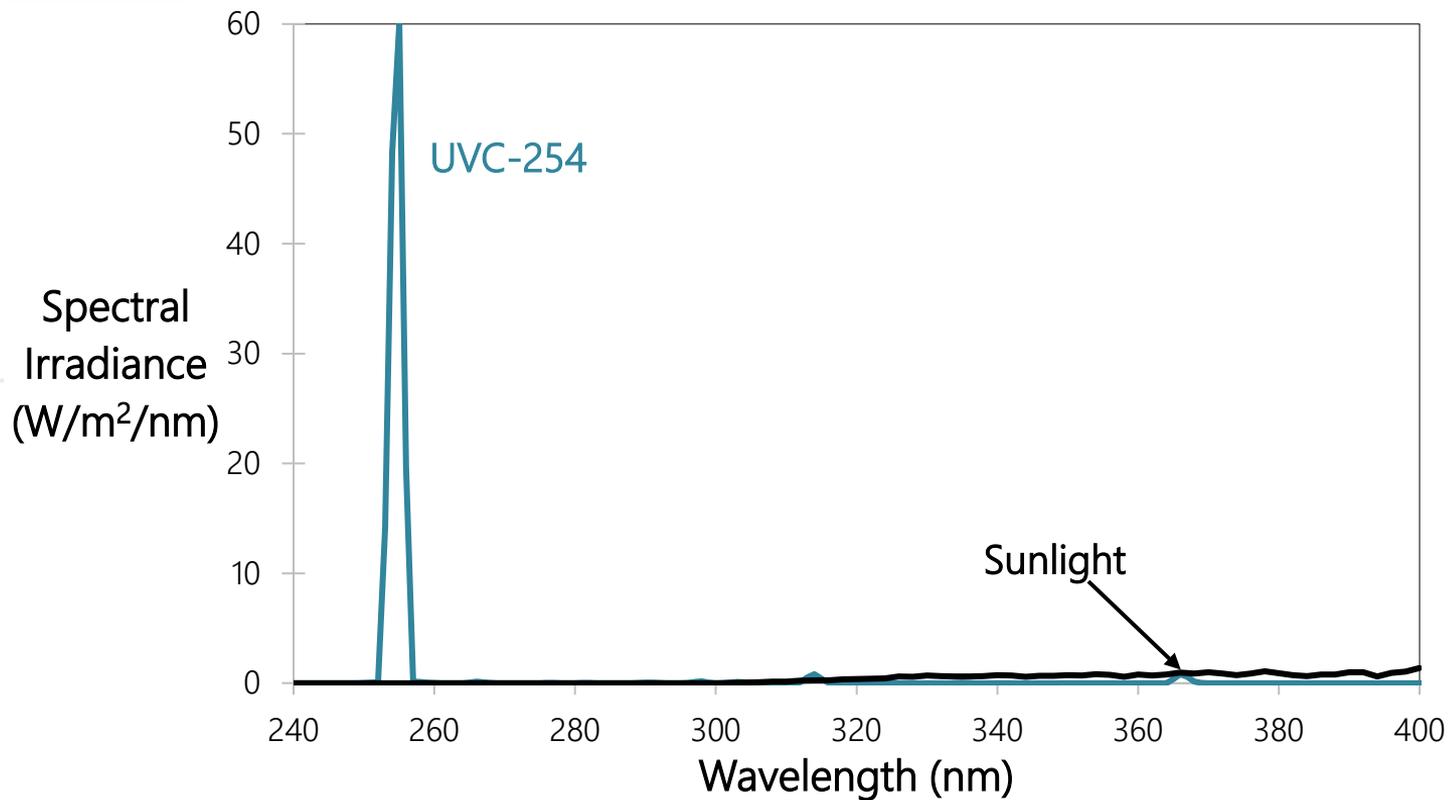


TUV-421 Lamps

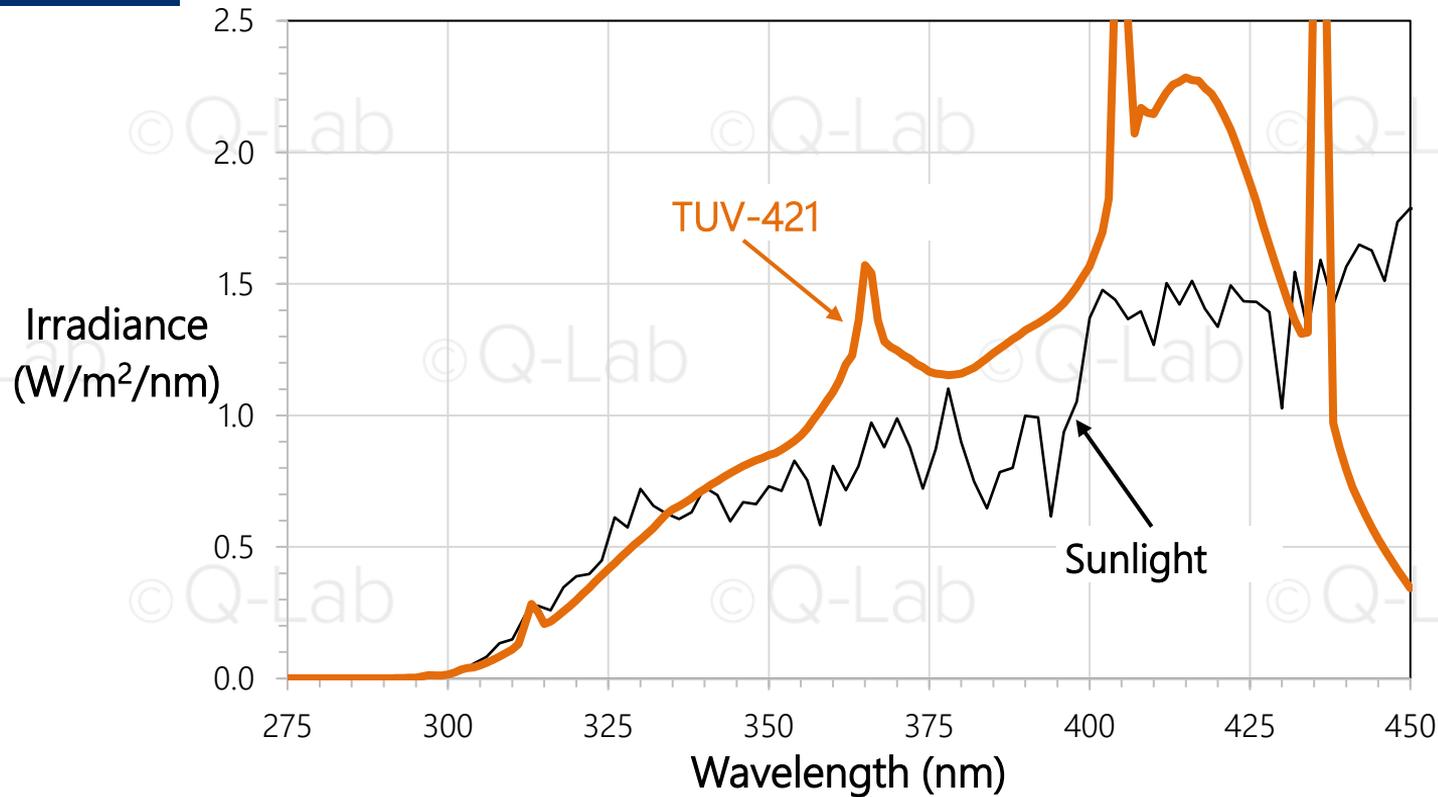

Cool White Lamps

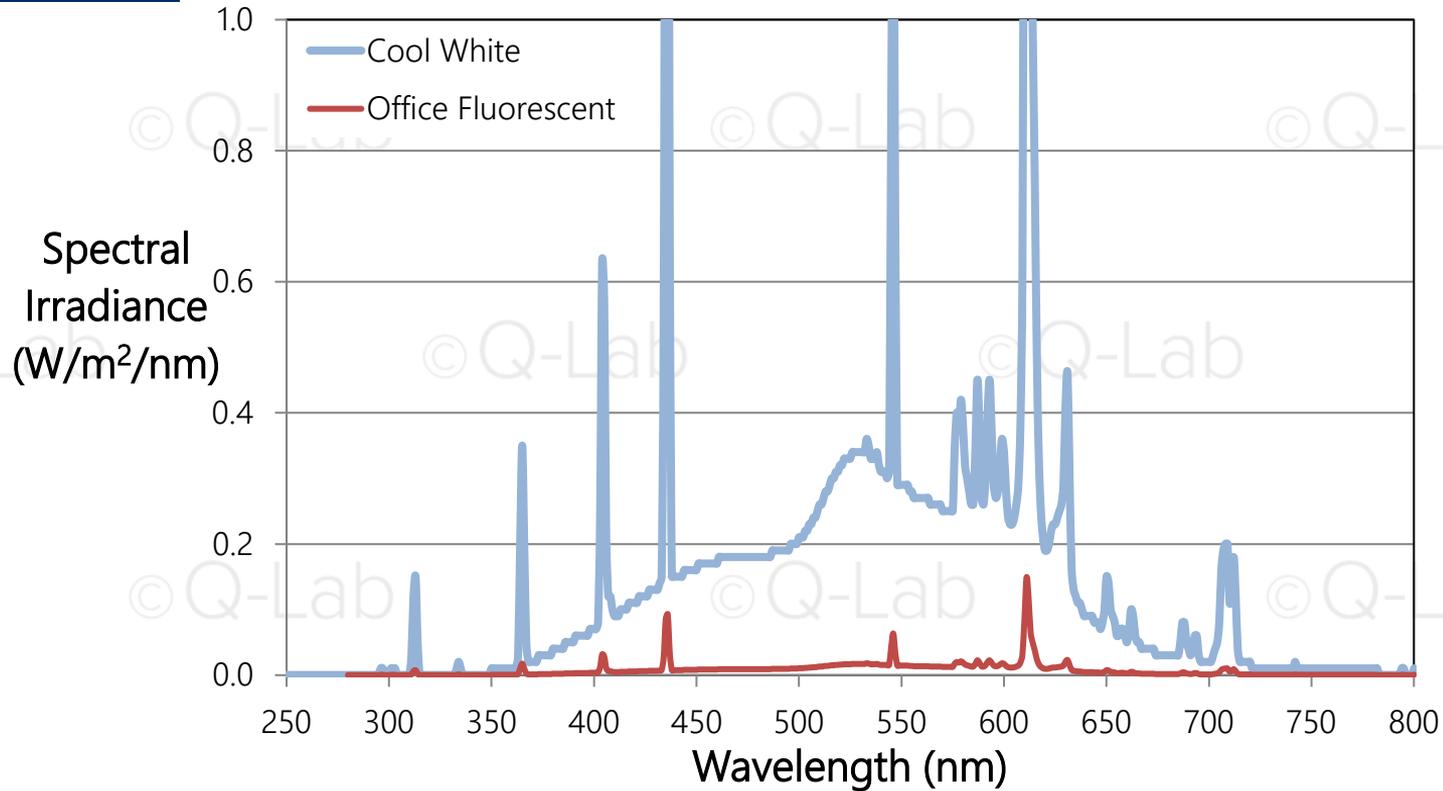

QUV SOLAR EYE™ Irradiance Control

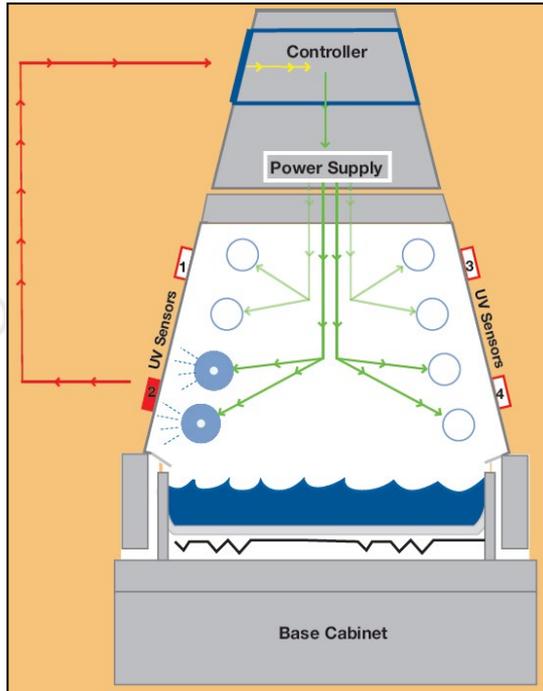

Feedback Loop Control


- Fluorescent UV lamp
- Light sensor
- Control module

Fluorescent Lamp Advantages

- Fast Results
- Simplified irradiance control
- Very stable spectrum – no aging
- Low maintenance
 - Simple calibration
- Low price and operating cost
- Simple and easy to maintain


Temperature & Color

Temperature difference between colored panels and Black Panel

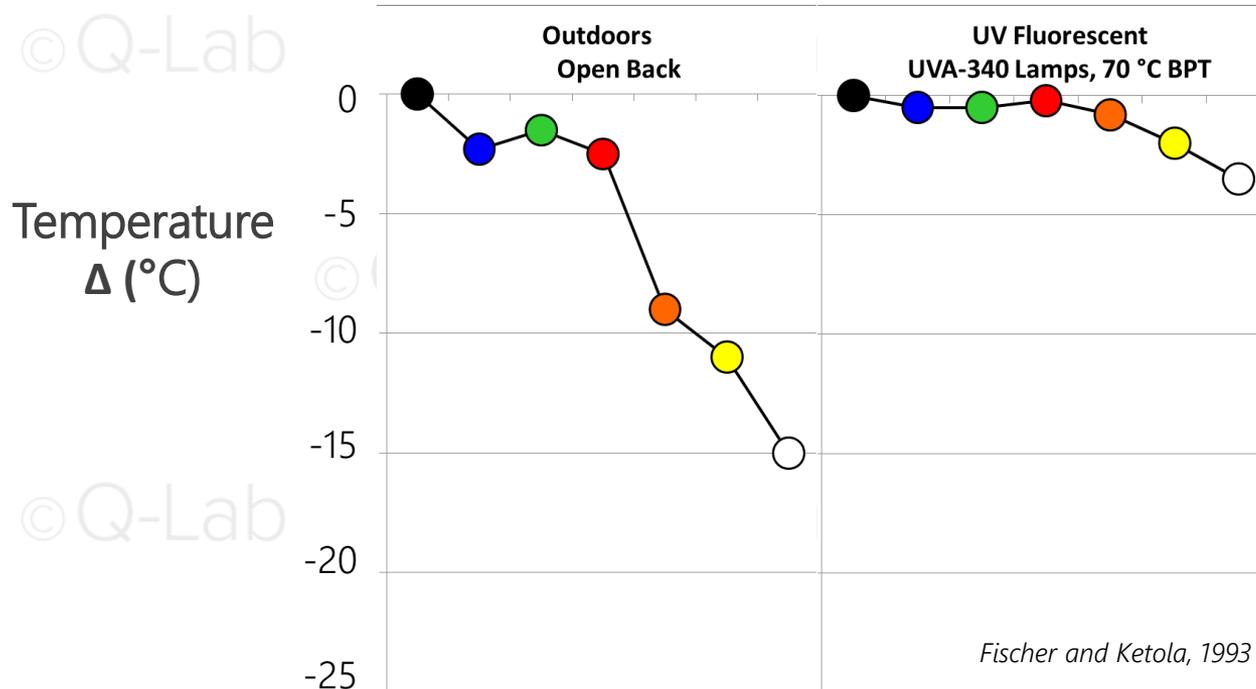

Fischer and Ketola, 1993

Condensation

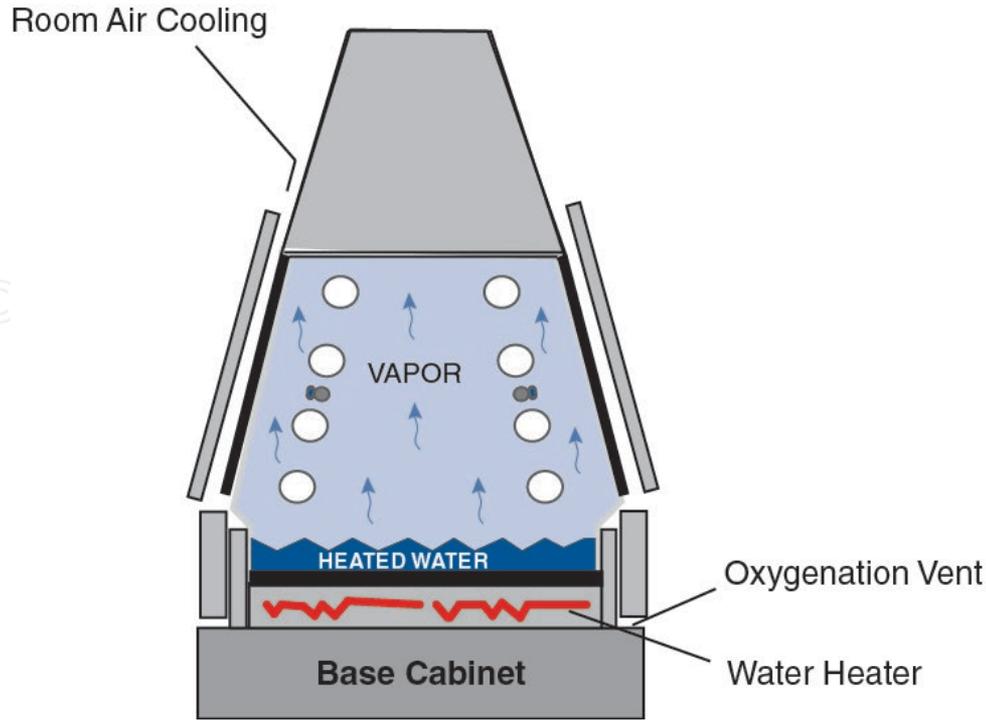

Condensation Advantages

- Closest match to natural wetness
- Best way to accelerate water in an laboratory tester
- Elevated temperature
- High O₂ content
- Tester performs distilling – you cannot deposit debris on specimens!
Water is guaranteed to be clean.



Creating condensation in the QUV is easy and does not require expensive, pure water

Water Spray

- Ensures that parts get fully saturated
- Creates erosion & thermal shock
- Less common than condensation



QUV Specimen Mounting



Fluorescent UV Summary

- UVA-340 best simulation of short-wave UV
- UVB-313 fastest & most severe
- TUV-421 offers a broader spectrum for color fade
- Stable spectrum – no aging
- No visible light
- Condensation realistic & rigorous
- Water spray available but not RH control

QUV Accelerated Weathering Tester



Fluorescent UV and Xenon Arc

Complementary Technologies

Fluorescent UV

- UVA-340 best simulation of shortwave UV
- UVB-313 might be too severe
- TUV-421 lamps offer some visible
- Stable spectrum
- No RH control
- Condensation or water spray
- Inexpensive, simple to use

Xenon Arc

- Full spectrum (UV-Vis-IR)
- Best simulation of long wave UV & visible light
- Spectrum shifts
- RH control
- Water spray
- More complex system

What We Will Talk About

- Basics of Weathering
- Why Perform Laboratory Weathering?
- Laboratory Weathering Testing
 - Xenon
 - Fluorescent UV
- Elements of an Effective Testing Program

What Kind of Test Should I Run?

| Accelerated Test Type | Result | Test Time | Results compared to |
|----------------------------|-------------------------------------|---|--|
| Quality Control | Pass / fail | <ul style="list-style-type: none">• Defined• Short | Material specification |
| Qualification / validation | Pass / fail | <ul style="list-style-type: none">• Defined• Medium-long | Reference material or specification |
| Correlative | Rank-ordered data | <ul style="list-style-type: none">• Open-ended• Medium | Natural exposure (Benchmark site) |
| Predictive | Service life Acceleration factor | <ul style="list-style-type: none">• Open-ended• Long | Natural exposure (Service environment) |

What Kind of Test Should I Run?

| Accelerated Test Type | Result | Test Time | Results compared to |
|----------------------------|-------------------|---|-------------------------------------|
| Quality Control | Pass / fail | <ul style="list-style-type: none">• Defined• Short | Material specification |
| Qualification / validation | Pass / fail | <ul style="list-style-type: none">• Defined• Medium-long | Reference material or specification |
| Correlative | Rank-ordered data | <ul style="list-style-type: none">• Open-ended• Medium | Natural exposure (Benchmark site) |

Putting It All Together

- Identify the kind of accelerated test
 - Outdoor data is imperative to correlative and predictive testing
- Identify service environment
 - Indoor or Outdoor
 - Wet or Dry
 - Hot or Cool

Putting It All Together

- Use Best Practices
 - Run until a defined failure mode
 - Use multiple replicates
 - Perform evaluations and reposition frequently
- Pick an appropriate Test Architecture
 - What does the standard say?
 - Is full spectrum important?
 - How important is water uptake?

Thank you for your time.

Questions?
info@q-lab.com

We make testing simple. |

